


Perimeter trunking to lab bench – no need to coordinate with sink location

Trunking is installed, prior to benching, to room perimeter. Avoids the need to coordinate and provide back boxes and conduit in wall / partition at sink location. Where sink is required the trunking cover plate is fixed and sealed in position, and is contained within a Trespa enclosure.

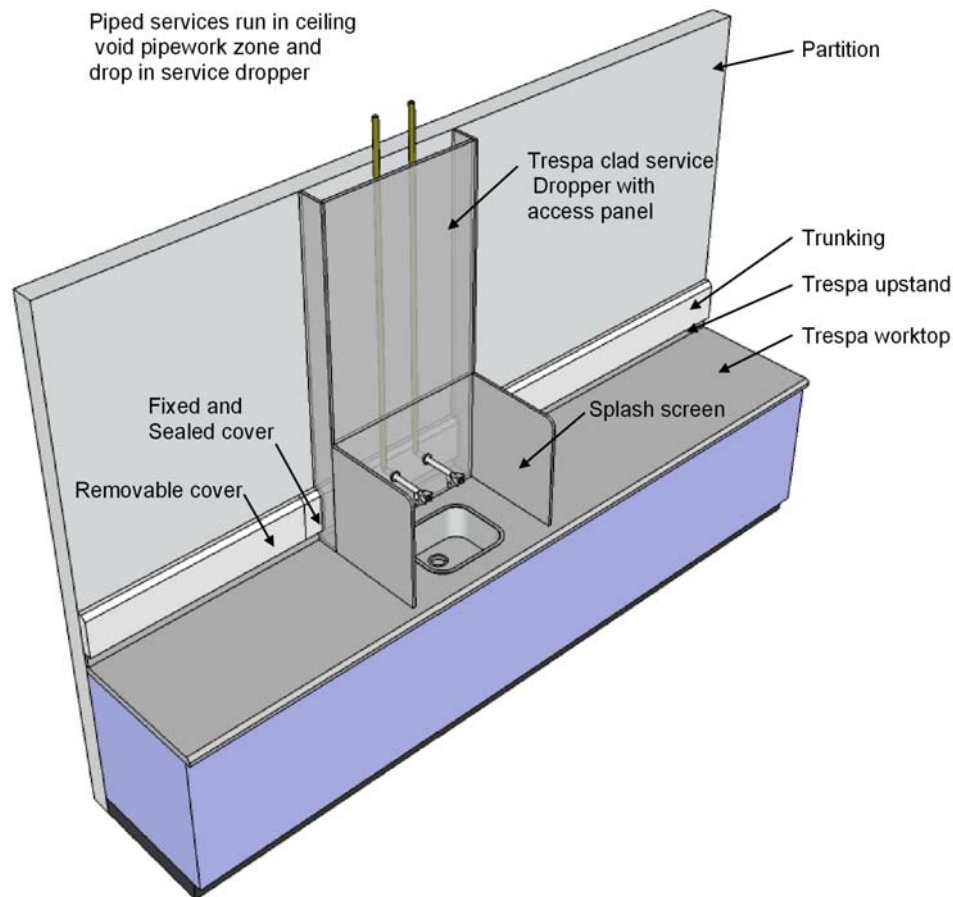

Best Practice Bullet Points

- Health and safety improved, no cutting / chasing of wall/partition
- Cost and time saving – no back boxes and conduit required to link up trunking either side of sink, cabling easier.
- Taps may be wall mount type fixed to Trespa panel
- Ease of access to pipe work / isolation valves in service dropper
- Provides future flexibility
- Arrangement ideal for installing sink in existing lab, where trunking preexists